


BATTERY REPLACEMENT:

- TWIST BATTERY COMPARTMENT COVER TO OPEN;
 - THIS UNIT REQUIRES 4 x "AA" (LR6) BATTERIES;
 - ALWAYS REPLACE ALL BATTERIES AT THE SAME TIME;
 - NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED;
 - RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION;
 - RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED;
 - DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES ARE NOT TO BE MIXED;
 - ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED;
 - BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY;
 - EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY;
 - THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED;
 - REPLACE BATTERY COVER WITH SKY PONG WORDS RIGHT SIDE UP.
- TWIST TO CLOSE COVER.

1. To avoid risk of injury, only use the balls supplied
2. Warning. Do not aim at eye or face.
3. Warning. Not suitable for children under 36 months.
Contains small balls.
4. Ensure your Sky Pong is switched on and up to speed before inserting a ball otherwise it might jam and automatically switch off. If this happens, please switch it off and remove the stuck ball.

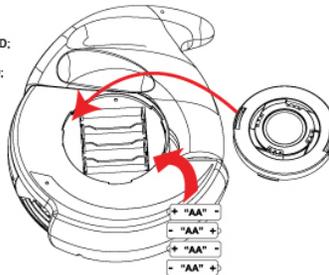

DC 4 X 1.5V (AA,UM3) LR6
BATTERIES INCLUDED FOR DEMONSTRATION PURPOSE ONLY.



ALL WIRE TIES AND PLASTIC PIECES ARE NOT PARTS OF THE TOY AND SHOULD BE REMOVED BEFORE GIVING IT TO YOUR CHILD. THE PACKAGING HAS TO BE KEPT SINCE IT CONTAINS IMPORTANT INFORMATION. SPECIFICATION, COLORS AND CONTENTS ARE SUBJECT TO CHANGE WITHOUT NOTICE. PHOTOS AND ILLUSTRATIONS MAY VARY FROM ACTUAL PRODUCT. PLEASE RETAIN IMPORTER NAME & ADDRESS FOR FUTURE REFERENCE.



WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.