



Slice the Cheese

Contents:

- 1 Electronic Cheese
- 1 Game Board
- 4 Token Bases
- 4 Player Tokens
- 6 Pretend Cheese Knives

Before you begin:

Open the battery box door on the bottom of the cheese with a small screwdriver and insert two "AAA" batteries as shown (Fig. 1). Close the battery box door and retighten the screw. Slide the On/Off switch to the ON position (Fig. 2) and you will hear a slide whistle sound indicating the game is ready to play.

But Don't C

Playing the game:

To select which player goes first, each player in turn inserts one knife until a "Cut the Cheese" sound is heard. The first player who "Cut the Cheese" will start the game. Place all the tokens in the START area (Fig. 3). Each player announces how many knives they want to slice into the cheese. One at a time, insert all of your selected knives into any slot in the cheese. If you DO NOT hear the "Cheese" sound, you can move your playing piece down the board. Move the same number of spaces as the number of knives you sliced into the cheese. If you hear a "Cut the Cheese" sound, you must go back to Start.

Winning the game:

The first player to reach the FINISH 3 times wins.



(Fig. 1)



(Fig. 2)



(Fig. 3)



75D Lackawanna Avenue Parsippany, New Jersey 07054 USA 1-800-631-1272 www.EpochEverlastingPlay.com



Item # P25124
@2017 Epoch Everlasting Play LLC
"WHO CUT THE CHEESE" is a registered trademark
of Rudell Design, LLC, used under license.
PATENT PENDING

This product meets or exceeds ASTM F963
Styles and colors may vary.
Illustration by Kenny Kiernan
Created by Rudell Design LLC

Requires 2 "AAA" batteries, not included. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries. Do not use rechargeable batteries. Non-rechargeable batteries are not to be recharged.

Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy.